


INSTALLATION INSTRUCTIONS

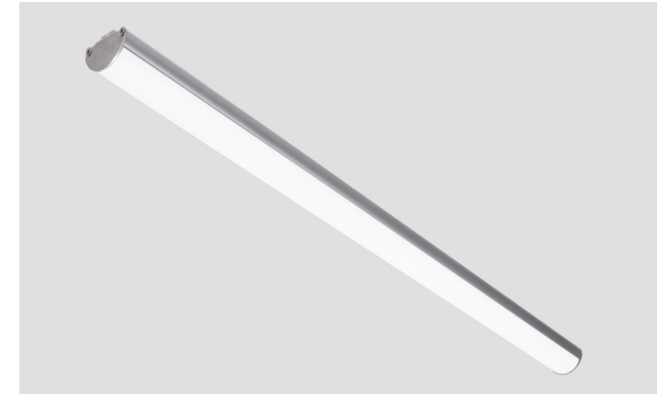

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
CE PRODUIT DOIT ETRE INSTALLE SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHERENTS.
DISCONNECT POWER PRIOR TO ANY INSTALLATION.
DEBRANCHEZ LE COURANT AVANT TOUTE INSTALLATION.
CAP ALL WIRING CONNECTIONS WITH UL APPROVED WIRE CONNECTORS.
COUVRIR TOUTES LES CABLES AVE DES CONNECTIONS APPROUVES (UL).
VERIFY SUPPLY VOLTAGE MEETS LUMINAIRE LABEL SPECIFICATIONS.
VERIFIEZ QUE LA TENSION SOIT COMPATIBLE AVEC LES CARACTERISTIQUES DU LUMINAIRE MARQUE SUR LETIQUETTE.
ALLOW FIXTURE TO COOL BEFORE TOUCHING HEATSINK OR LIGHT SOURCE.
LAISSEZ LE PROJECTEUR REFOIDIR AVANT DE TOUCHER LE RADIATEUR OU LA SOURCE DE LUMIERE.
DO NOT ATTEMPT TO OPEN OR MAKE REPAIRS INSIDE LUMINAIRE.
NE PAS TENTER DOUVRIRE OU DE FAIRE DES REPARATINS A L'INTERIEUR DU LUMINAIRE.
AVOID DIRECT VIEWING OF LIGHT SOURCE.
EVITEZ DE REGARDER DIRECTMENT LA SOURCE LUMINEUSE.
THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.
CE PRODUIT DOIT ITRE INSTALLE PAR UN ELECTRICIEN QUALIFIE.
SUITABLE FOR UNDER-CABINET MOUNT.
ADAPTE POUR SOUS-CABINET MOUNT.
SUITABLE FOR DAMP LOCATION.
ADAOTE POUR DES ENDROITS HUMIDES.
SUITABLE FOR CONTINUOUS ROW MOUNTING.
ADAPTE POUR CONTINUE ROW MONTAGE.



STARBAR STARBAR WIDE


Note: All pictures shown are
STARBAR WIDE

INSTALLATION INSTRUCTIONS

Remote Driver




Each section of StarBar includes (1) Remote driver. Each driver enclosure is provided with a 7/8" knockout on one end for building mains wiring. Driver enclosed will have one or two low voltage power cords depending on lumen output of fixture. Do not attempt to modify low voltage wiring between driver and the fixtures. Doing so may cause malfunction and void warranty.

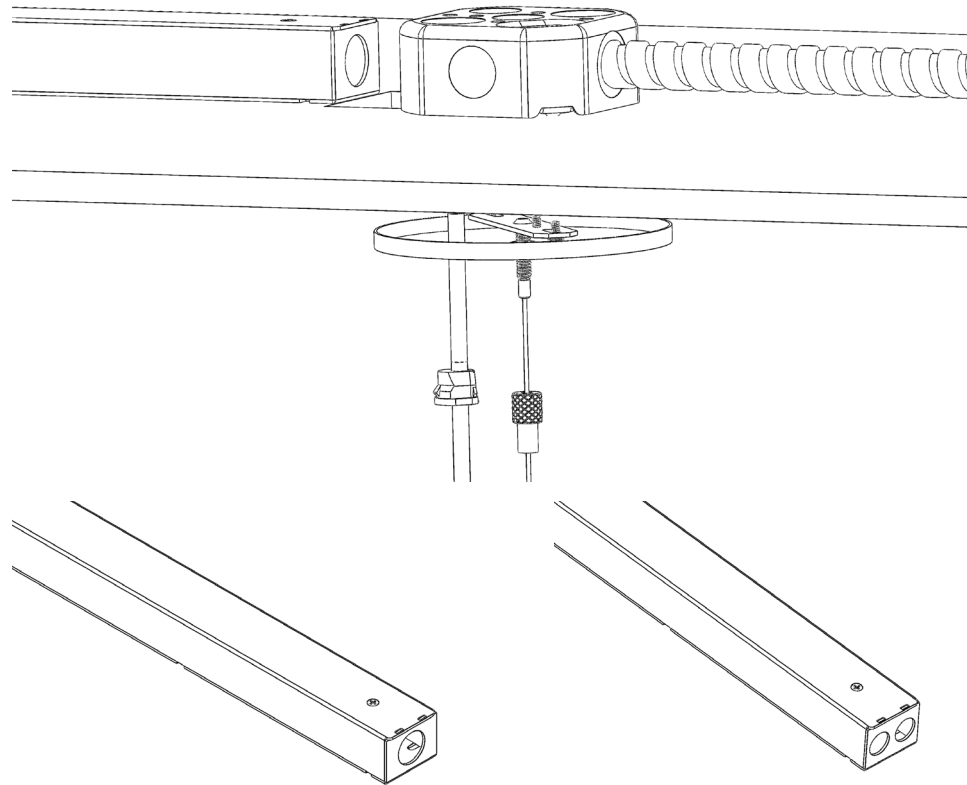


INSTALLATION INSTRUCTIONS

Individual Pendant Mount (ACxxx)


1 Power must be turned off prior to disconnecting or reconnecting fixture.

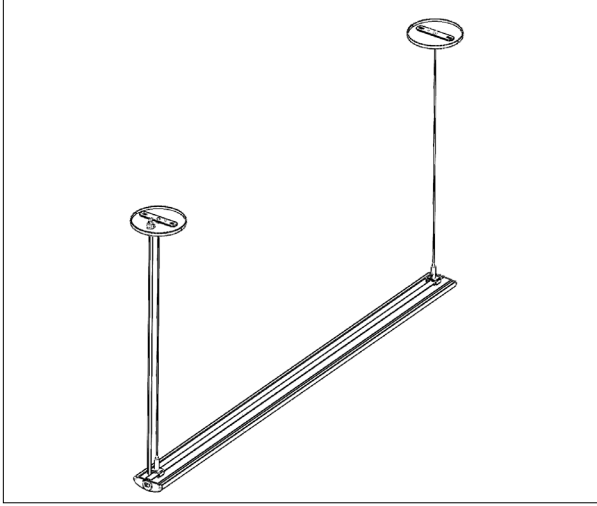


2 Locate ceiling mounting points according to supplied client drawing. Connect wire to building mains and then canopy to structure. Remove slack from cord attach strain relief to hole.

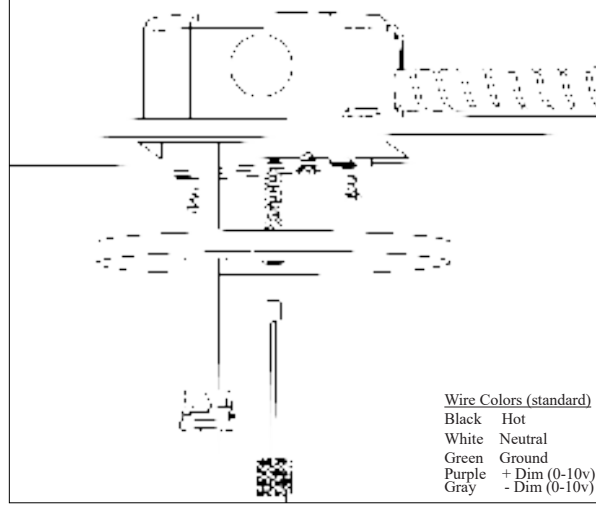


3 Power feed side. Secure canopy (A) with threaded coupler (B) on threaded stud (C)

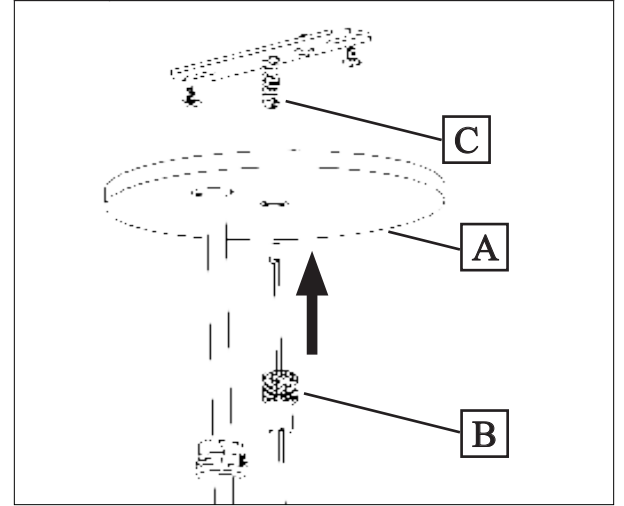


4 Non-power feed side. Secure canopy (D) with cable coupler (E) on threaded stud (F)

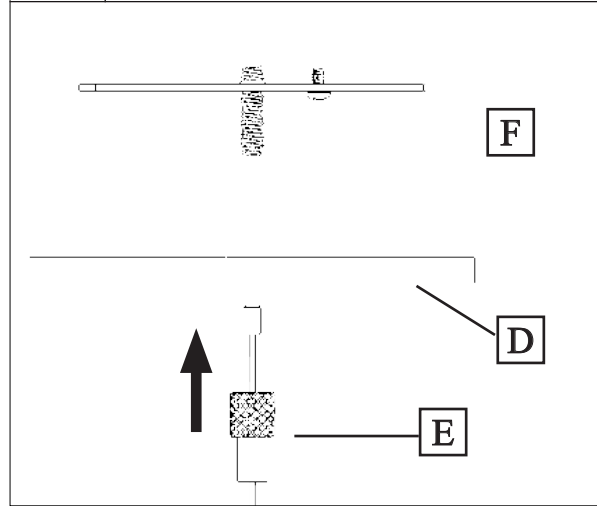

5 Pendant Mt fixture come standard with (2) adjustable grippers that accept 1/16 aircraft cable. Adjust gripper and bracket location by loosening the gripper and sliding the bracket to desired location. Restore power

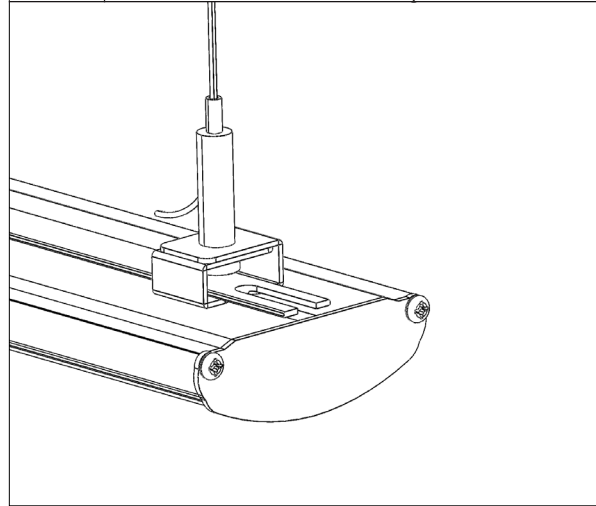


6 Power locations from top or side.

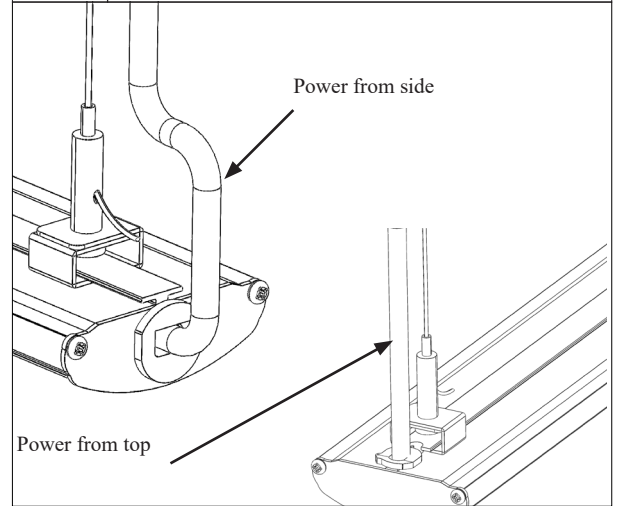


INSTALLATION INSTRUCTIONS

Individual Surface Mount (SM)


1 Power must be turned off prior to disconnecting or reconnecting fixture.

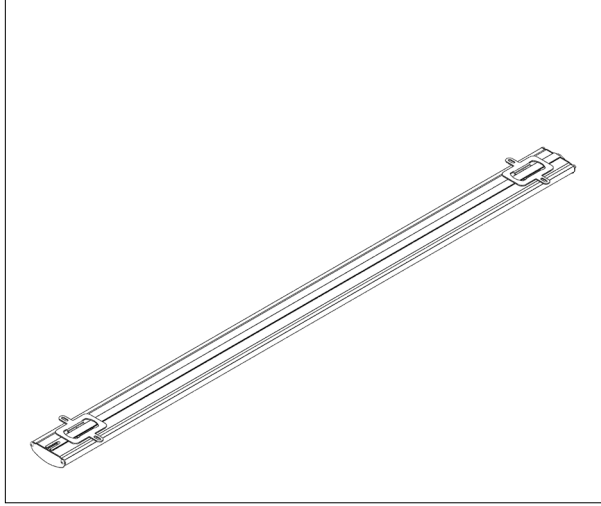


2 Each fixture comes with 2 surface mount brackets. Loosen set screws to move brackets to desired location. Tighten set screw to lock bracket in place.

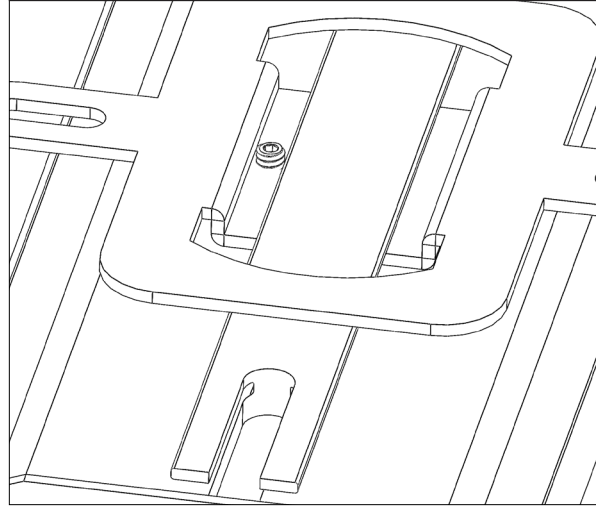


3 Connect wire to building mains.

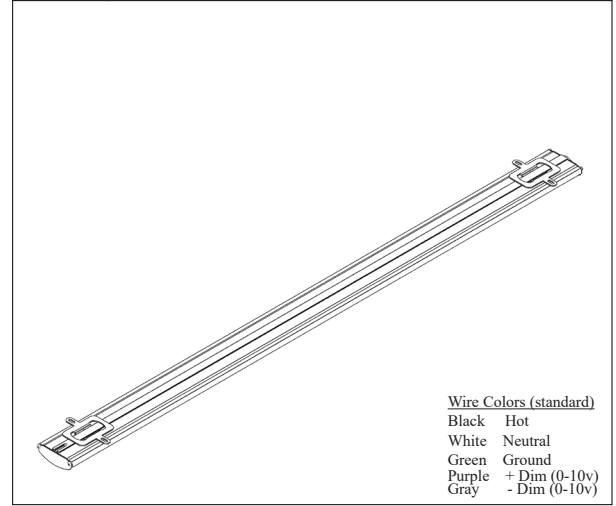


4 Secure fixture to structure with thru mounting holes on the outside of bracket. Restore power.

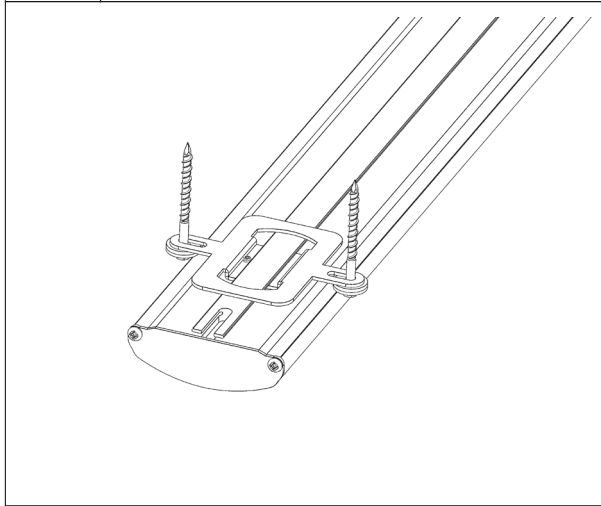

5 Power locations from top or side.

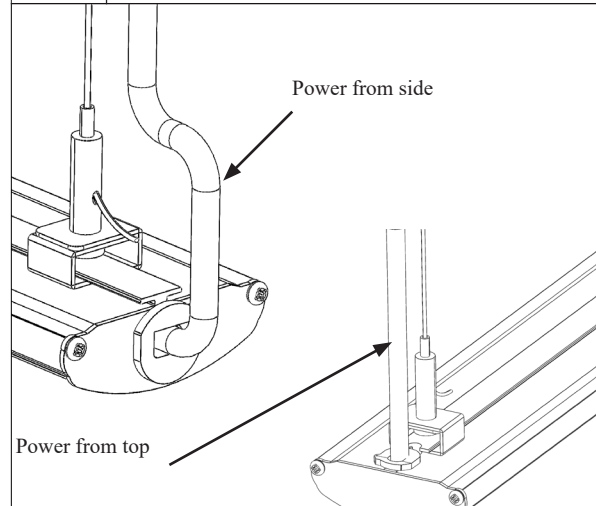


1 Restore power

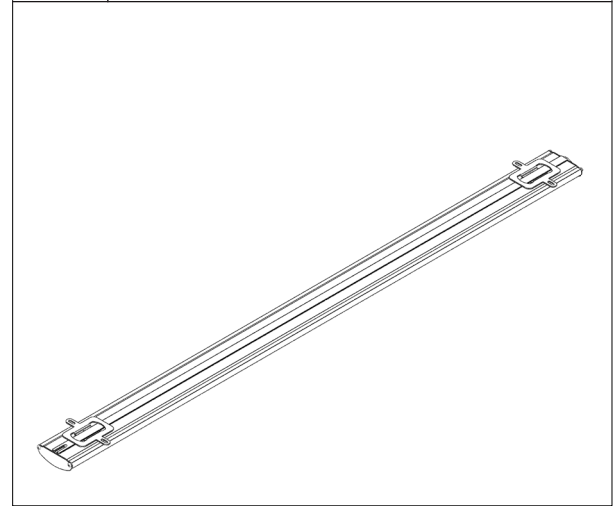


INSTALLATION INSTRUCTIONS

Individual T-Grid Mount (TM)


1 Power must be turned off prior to disconnecting or reconnecting fixture.

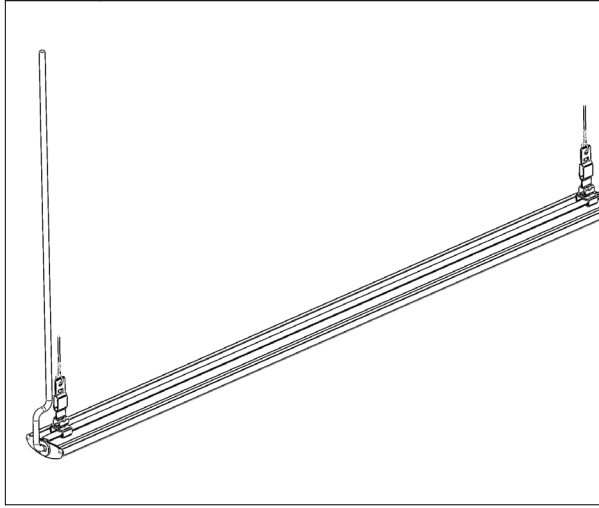


2 Attach independent support clip (caddy part 3 IDS or IDS9) to pendant mount bracket located on top of the fixture.

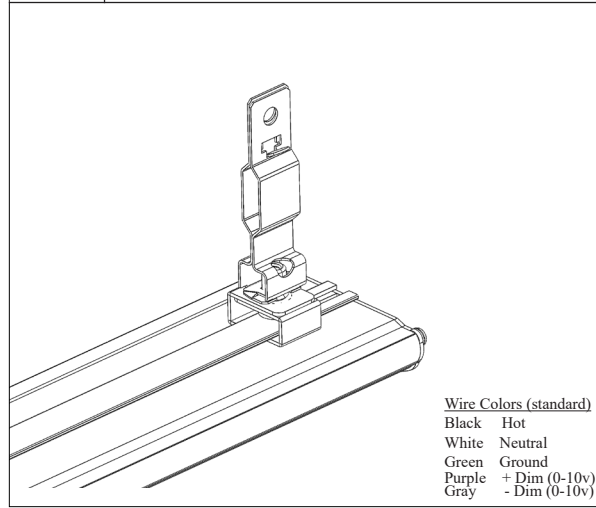


3 Attach fixture to 15/16" or 9/16" t-grid by folding two halves of the support clip around t-grid. Lock the two halves together.

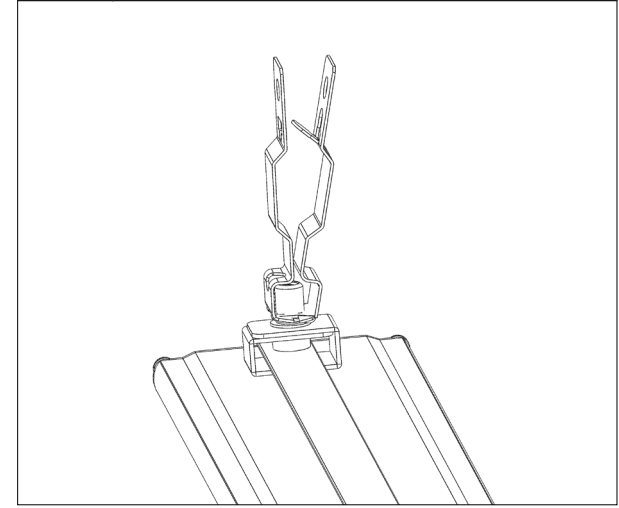

4 Attach appropriately rated cable through hole and secure cable to structure.

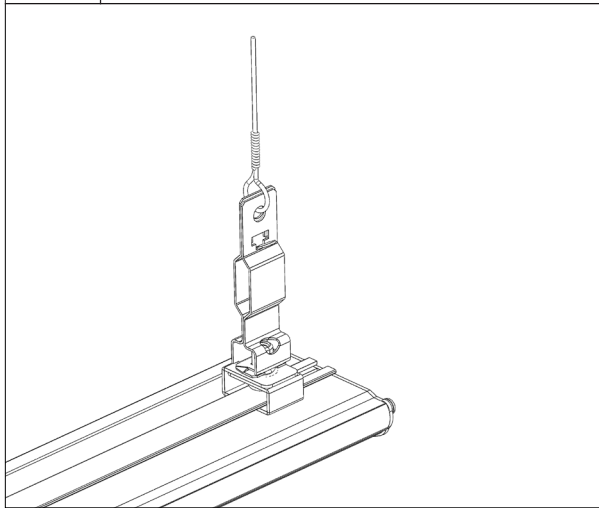

5 Power locations from top or side.

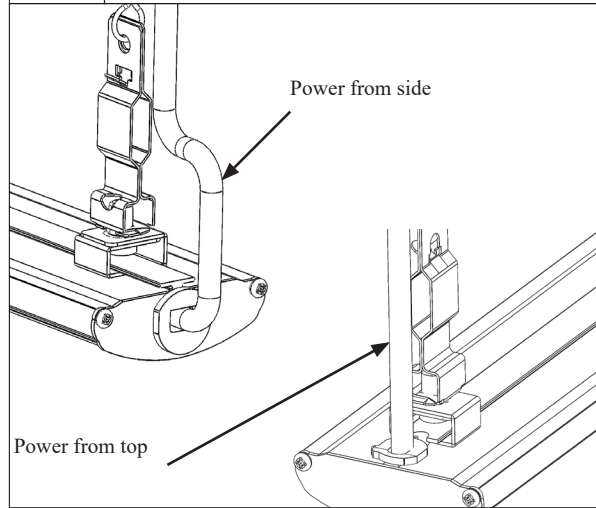

6 Restore power

