











THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

CE PRODUIT DOIT ETRE INSTALLE SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHERENTS.

DISCONNECT POWER PRIOR TO ANY INSTALLATION.

DEBRANCHEZ LE COURANT AVANT TOUTE INSTALLATION.

CAP ALL WIRING CONNECTIONS WITH UL APPROVED WIRE CONNECTORS.

COUVRIR TOUTES LES CABLES AVE DES CONNECTIONS APPROUVES (UL).

VERIFY SUPPLY VOLTAGE MEETS LUMINAIRE LABEL SPECIFICATIONS.

VERIFIEZ QUE LA TENSION SOIT COMPATIBLE AVEC LES CARACTERISTIQUES DU LUMINAIRE MARQUE SUR LETIQUETTE.

ALLOW FIXTURE TO COOL BEFORE TOUCHING HEATSINK OR LIGHT SOURCE.

LAISSEZ LE PROJECTEUR REFOIDIR AVANT DE TOUCHER LE RADIATEUR OU LA SOURCE DE LUMIERE.

DO NOT ATTEMPT TO OPEN OR MAKE REPAIRS INSIDE LUMINAIRE.

NE PAS TENTER DOUVRIR OU DE FAIRE DES REPARATINS A LINTERIEUR DU LUMINAIRE.

AVOID DIRECT VIEWING OF LIGHT SOURCE.

EVITEZ DE REGARDER DIRECTMENT LA SOURCE LUMINEUSE.

THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.

CE PRODUIT DOIT ITRE INSTALLE PAR UN ELECTRICIEN QUALIFIE.

SUITABLE FOR UNDER-CABINET MOUNT.


ADAPTE POUR SOUS-CABINET MOUNT.

SUITABLE FOR DAMP LOCATION.

ADAOTE POUR DES ENDROITS HUMIDES.

SUITABLE FOR CONTINUOUS ROW MOUNTING.

ADAPTE POUR CONTINUE ROW MONTAGE.

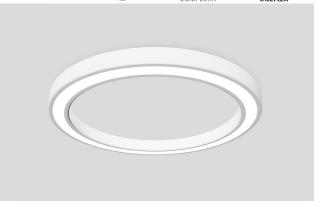


HALOD HALODI HALO MAX ECLIPSE


Note: All pictures shown are of Halo Direct


Surface Mount option not available for Eclipse fixture


Surface Mount (SM)




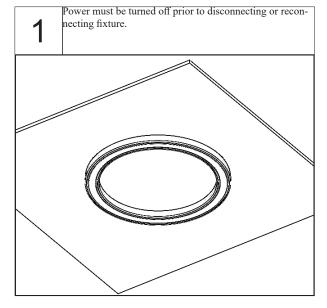


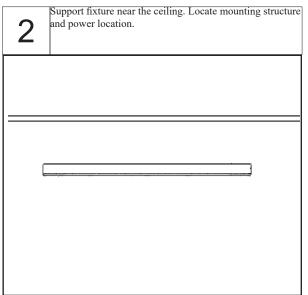

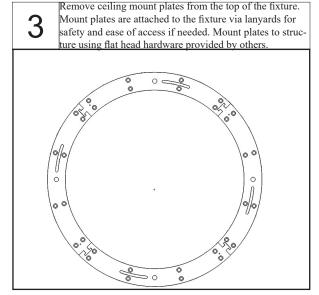

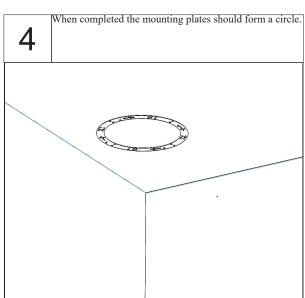

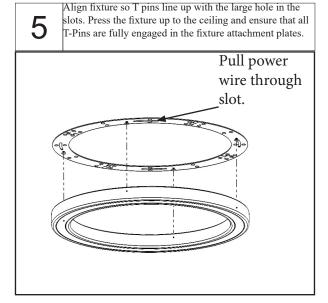

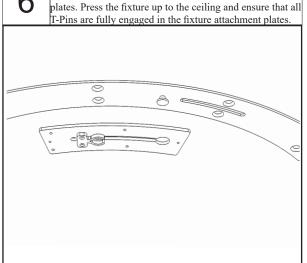


Locate the attachment plates on the fixture and align the


slot on the fixture with the T-Pin on the ceiling mount


Surface Mount (SM)





Once T-Pins are fully engaged, twist the entire fixture clockwise ~8 degrees. Once T-Pin is located at end of slot, it will snap and lock into an internal clip.

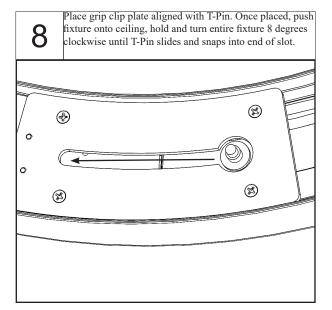

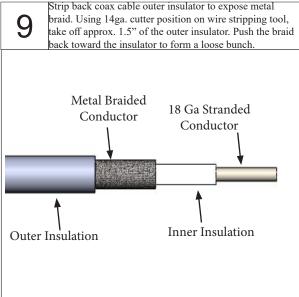

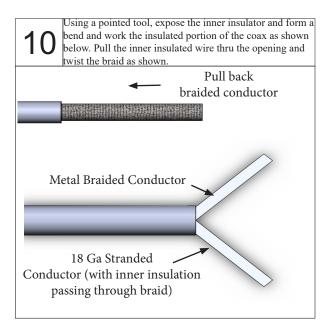


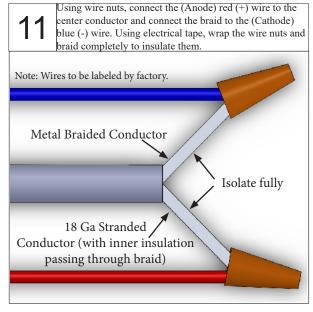

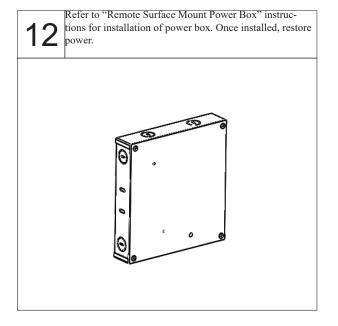



Powered Canopy (PCx)




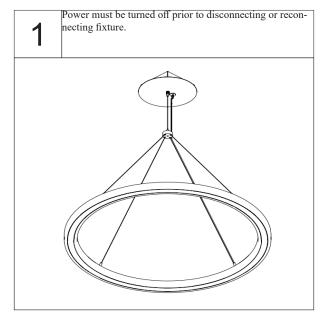




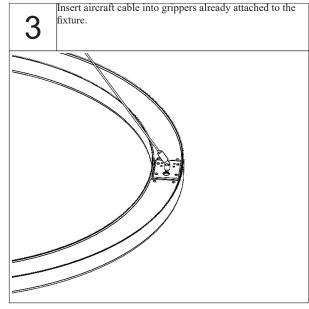

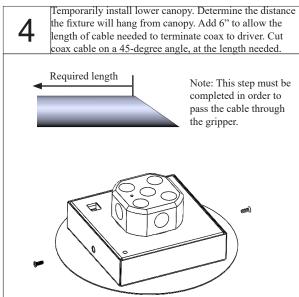


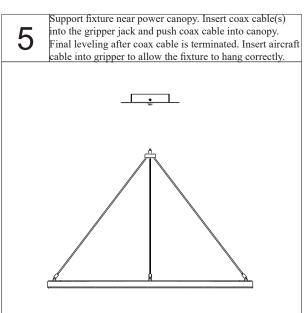


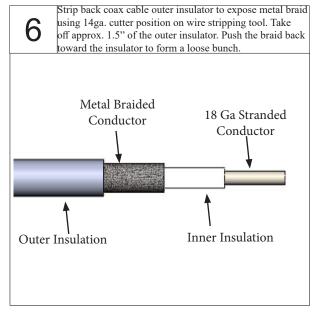



Powered Canopy (PCx)




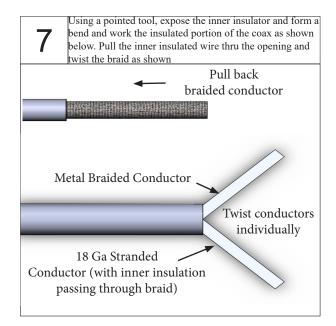

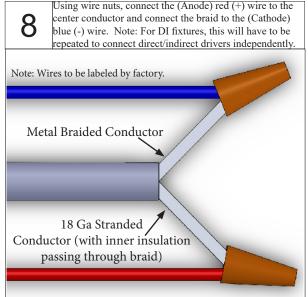

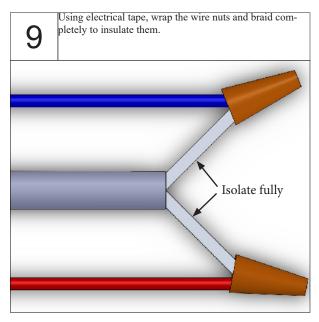


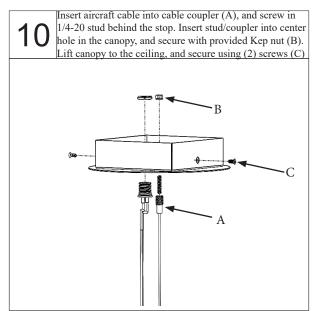

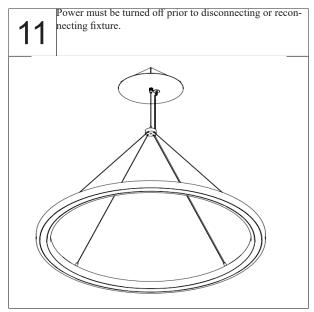



Remote Surface Mount (RSMx)




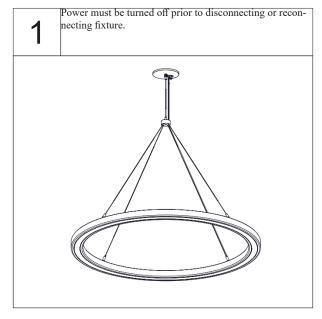




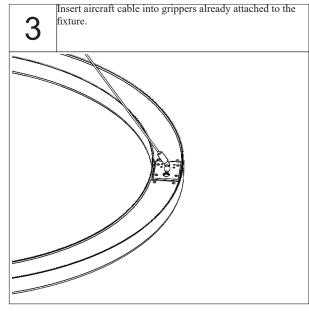

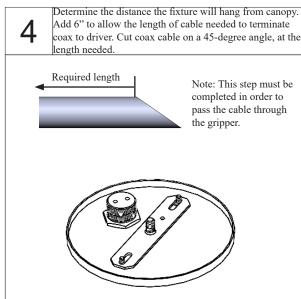


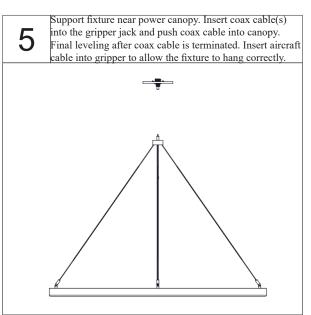


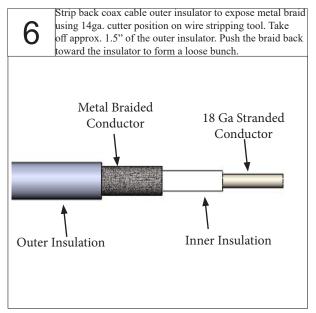



Remote Surface Mount (RSMx)




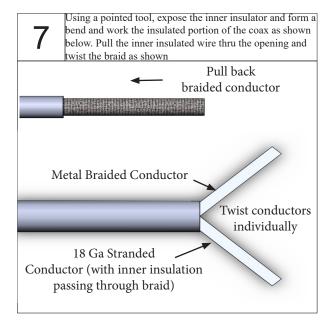


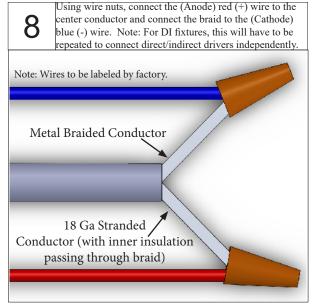

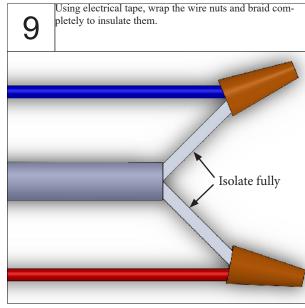

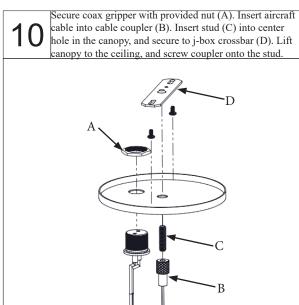

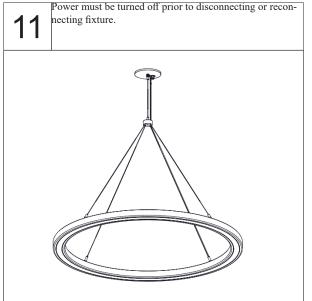

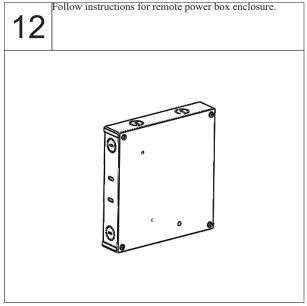

Remote Surface Mount Power Box (RSMx)



For conduit application: Run conduit (provided by others)

Power must be disconnected prior installing power box.

Remove 4 screws to take cover (A) off of power box.

A

