


INSTALLATION INSTRUCTIONS

⚠ WARNING

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
CE PRODUIT DOIT ETRE INSTALLE SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAIT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHERENTS.
DISCONNECT POWER PRIOR TO ANY INSTALLATION.
DEBRANCHEZ LE COURANT AVANT TOUTE INSTALLATION.
CAP ALL WIRING CONNECTIONS WITH UL APPROVED WIRE CONNECTORS.
COUVRIR TOUTES LES CABLES AVE DES CONNECTIONS APPROUVES (UL).
VERIFY SUPPLY VOLTAGE MEETS LUMINAIRE LABEL SPECIFICATIONS.
VERIFIEZ QUE LA TENSION SOIT COMPATIBLE AVEC LES CARACTERISTIQUES DU LUMINAIRE MARQUE SUR LETIQUETTE.
ALLOW FIXTURE TO COOL BEFORE TOUCHING HEATSINK OR LIGHT SOURCE.
LAISSEZ LE PROJECTEUR REFOIDIR AVANT DE TOUCHER LE RADIATEUR OU LA SOURCE DE LUMIERE.
DO NOT ATTEMPT TO OPEN OR MAKE REPAIRS INSIDE LUMINAIRE.
NE PAS TENTER DOUVRIRE OU DE FAIRE DES REPARATINS A L'INTERIEUR DU LUMINAIRE.
AVOID DIRECT VIEWING OF LIGHT SOURCE.
EVITEZ DE REGARDER DIRECTMENT LA SOURCE LUMINEUSE.
THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.
CE PRODUIT DOIT ITRE INSTALLE PAR UN ELECTRICIEN QUALIFIE.
SUITABLE FOR UNDER-CABINET MOUNT.
ADAPTE POUR SOUS-CABINET MOUNT.
SUITABLE FOR DAMP LOCATION.
ADAOTE POUR DES ENDROITS HUMIDES.
SUITABLE FOR CONTINUOUS ROW MOUNTING.
ADAPTE POUR CONTINUE ROW MONTAGE.

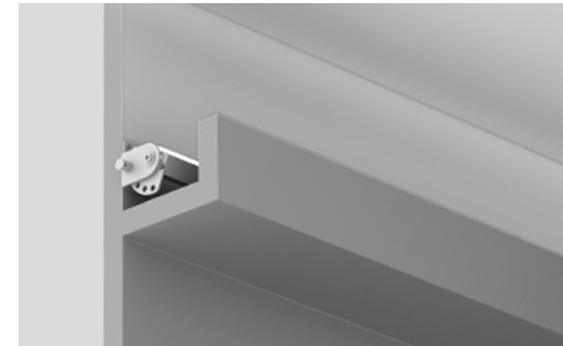


MICRO COVE

INSTALLATION INSTRUCTIONS | MICRO COVE


Mounting locations

Mounting locations (●) vary due to length. Views below show fixtures and their hole locations. Please see below of mounting locations as these vary based on length of the fixture. Power input locations (□). One power input per 8' section required. Located .5" from the end of the fixture assembly

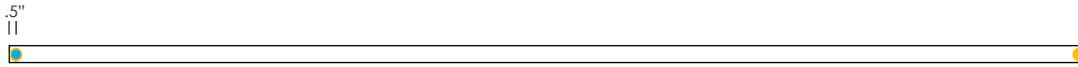

Mounting locations are located at the end of the lighting assembly. Install as required per local building code.


Power Illustration

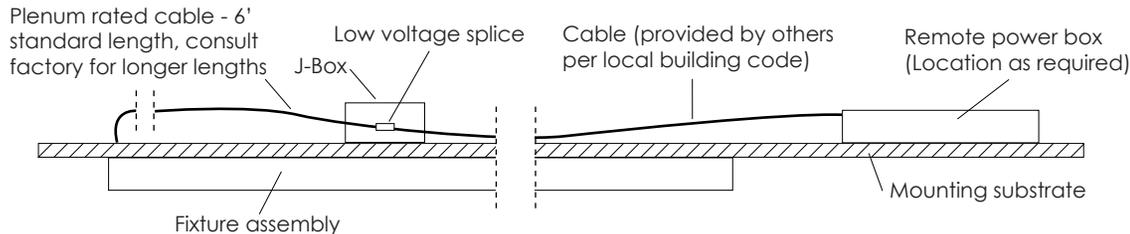


To be have a low voltage splice in a J-box (if required) behind the fixture. Drill a small hole through the substrate to push the plug through for installation.

Driver Wiring diagram

Wiring configurations are dependent on the options chosen. Below are a few examples of our standard wiring that is used to power the fixture.

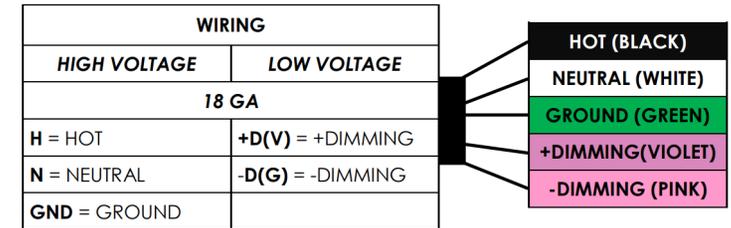


This wiring diagram is showing a standard set of wires for a basic fixture.

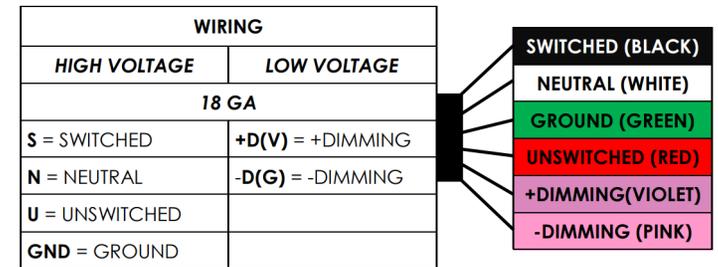


This wiring diagram is showing a set of wires for a fixture with a emergency battery.

Note: DO NOT PUT LINE VOLTAGE INTO THE PINK AND VIOLET WIRES, THIS CAN DAMAGE THE DRIVER

Remote Power Box - Location as required. Install within 12ft of fixture for the running of low voltage plenum rated cable

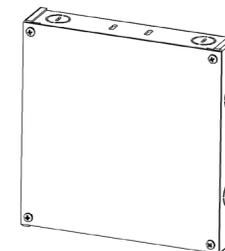

Wall mounted Remote Power Box - Location as required. Install within 12ft of fixture for the running of low voltage plenum rated cable

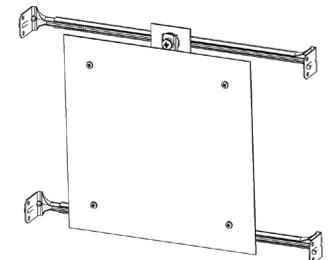

INSTALLATION INSTRUCTIONS | MICRO COVE

Adjustable Mount

1. Remove fixture from packaging. Check to make sure line voltage is off before making any electrical connections.
2. Install remote driver boxes (location as required) and run the low voltage plenum-rated cable (if required) to the J-box behind the fixture.
3. Wire driver using the provided wiring diagram (pg. 2)
4. Run mounting screw through the mounting bracket and secure to structure.
5. Locate the power feed side. Connect Low voltage wires behind fixture as required.
6. Pull rotation locking pin to allow the lighting assembly to rotate. Position the light bar to point the light in the desired direction. Release locking pin to the lock into place.
7. Install support bracket (if required) in the middle of the linear bar to ensure fixture stays level.
8. Turn the power on. Your fixture is finished being installed.

